

4 BUTTON / 1-WAY REMOTE START SYSTEMS QUICK START OPERATION GUIDE

Visit www.CrimeStopper.com today

To learn more about:

Additional Features

- Turbo Timer Support & Operation
- Customizing System Options
- Passive Security Functions
- Emergency Override

System Upgrades

- Linkr Smartphone Control
- 2-Way Controllers w/ Extended Range
- Upgrading To Full Security With Sensors & Siren

Problems? Questions? Contact Customer Service:

800-554-4053 (toll free) | +1-770-942-9876 (outside USA)



Scan to register
& check out
other products
[CrimeStopper.com!](http://CrimeStopper.com)

Your System Model:

(Installer, write system model above)

4 BUTTON / 1-WAY REMOTE START SYSTEMS QUICK START OPERATION GUIDE



REPLACING YOUR REMOTE BATTERY

STEPS	REMOTE PART#	BATTERY (QTY)
1) Find the part # on the back of the remote to identify the battery.	1415 & 1417	CR2016 (2)
2) Remove the screw (#0) from the back of the remote.		
3) Gently pry the case halves apart to access & replace the battery.		

SECURITY*, KEYLESS ENTRY, & CONVENIENCE FUNCTIONS

FUNCTION	4 BUTTON	NOTE
Lock & Arm*		Security enabled systems will flash the status LED.
Lock Only*		Ideal for occupied vehicles, RV's, etc.
Unlock & Disarm*		If only driver's door unlocks, press again to unlock all.
Silent Arm/Disarm*	x 2	System will toggle Arm/Disarm each time.
Disable Sensor*		Sensors are disabled until you Lock/Arm again.
Trunk/Hatch Release	For 0.8 Sec.	See your installer or the full manual for programmable options.
Panic	3 Sec.	Doors will Lock or Unlock before panic.
Engine Start/Stop	0.8 Sec	Activation is programmable (contact installer). Take Over: Turn ignition 'ON' (not start), press brake pedal.
Run Time Extender	. x 1 during RS	The system will restart the internal run timer.

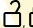 
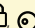 
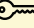 
*Security related functions only available on some models. Consult your installer to upgrade.

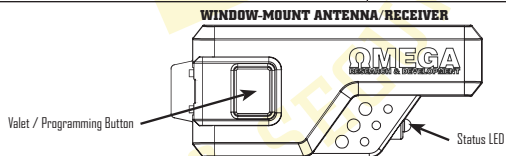
Register today at www.CrimeStopper.com

to activate/learn about your warranty



4 BUTTON / 1-WAY REMOTE START SYSTEMS QUICK START OPERATION GUIDE

REMOTE START FUNCTIONS		
FUNCTION	BUTTON(S)	NOTE
Pit Stop Mode	With engine running for more than 10 seconds: Automatic Transmission: Send START command from remote. Manual Trans: Press Valet 2x	This will leave the engine running for the programmed run time so you can take your keys with you to run errands.
XL Pit Stop Mode	Automatic Transmission: Within 10 seconds of activating Pit Stop Mode, send START command from remote again. Manual Trans: With engine running more than 10 sec. Press Valet 6x	This will leave the engine running for 12 hours so you can safely leave the engine running for extended periods. Ideal for commercial vehicles using strobes, refrigerators boxes, etc.
Low Battery & Low/Hi Temp Auto-Start	Press   in less than 5 seconds	Auto-start will activate a maximum of once per 2 hours (for carbon monoxide safety). See your installer or the full manual for threshold settings. DO NOT activate while vehicle is indoors.
FUNCTION	VALET BUTTON	NOTE
Remote Start Schedule	Within 10 seconds of entering Pit Stop Mode, press the Valet button equal to the desired schedule (once every 1-4 hrs). Press  to save selection.	The vehicle will start every 1, 2, 3, or 4 hours as selected. Your selection will be verified with Parking Light flashes (example: 2 presses = 2 flashes = 2 hours). To cancel: Activate remote start, Turn ignition key on, allow 72 hrs to pass.
Valet Mode	Ignition "ON", Hold Valet Button for 5 Sec.	This disables remote start and the security system. The status LED will turn on. Repeat this process to exit valet mode.



4 BUTTON / 1-WAY REMOTE START SYSTEMS QUICK START OPERATION GUIDE

MANUAL TRANSMISSION RESERVATION (DEFAULT)

This must be performed before you can remote start a manual transmission vehicle to ensure the car is in neutral & maximum safety. There are several options on how to activate reservation mode. Consult your installer for more information.

- 1) With the engine running (more than 10 seconds), press & hold the brake pedal
- 2) Put the transmission in neutral.
- 3) Apply the parking brake then release the brake pedal.
- 4) Send the remote start command via your remote. The status LED will begin flashing.
- 5) Take the ignition key out of the switch (the engine should stay running).
- 6) Exit the vehicle then lock your doors with the remote. The engine will turn off.

PROGRAMMING REMOTES

PROGRAMMING REMOTES TO THE SYSTEM (UP TO 4)

BEFORE YOU BEGIN: Have all remotes for the system at hand.

- 1) Turn the ignition key "ON" (do not start).
- 2) Press the valet button 4 times within 5 seconds of step 1.
 - The horn will chirp 4 times and the Parking Lights will flash 4 times.
- 3) Press & release the "lock" button on each transmitter one after the other.
 - The Parking Lights will flash 1-4 times for each transmitter learned.
 - NOTE: When the first new transmitter is learned all previous transmitters are erased.
 - NOTE: All other button functions will automatically be assigned.
- 4) Turn the ignition key "OFF".
 - The horn will sound briefly and the Parking Lights will flash 4 times.
 - NOTE: The system will exit automatically at any time after 10 seconds of no activity.

REMOTE START ERRORS

FLASHES	VIOLATED ZONE
LED ON	System in Valet mode
1	Brake pedal pressed
2	Hood opened
3	System in Valet Mode
4	3D sensor detected vehicle motion while cranking
5	Tach signal not detected
6	Received engine stop command (remote, telematics, etc.)
7	MT reservation mode not set
8	Run time expired
9	Low vehicle battery voltage detected

If the system fails to remote start or remote start stops unexpectedly, it will flash the parking lights. The number of light flashes indicates the cause of the failure.

TIP: If remote start won't activate, the system may be in valet mode (Status LED ON). Turn the ignition "ON" and hold the Valet Button for 5 seconds to exit. The status LED will turn off.